

Gas Poker Style Burner

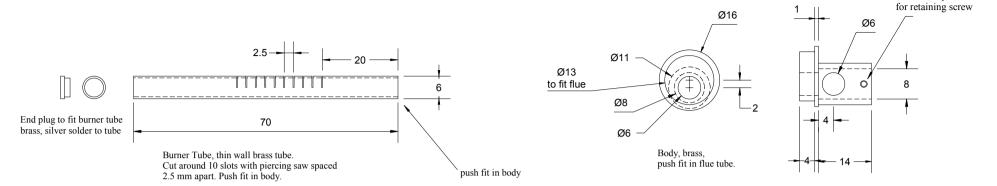



Use a No 3 gas jet, 0.15mm diameter orifice.

Approximate outline of gas pipe (3/32" copper) for tank above footplate. Silver solder to Jet holder. Connect to control valve with standard 3/32" nipple silver soldered to pipe and 3/16" x 40 union nut.

Approximate outline of gas pipe (3/32" copper) for alternative gas tank below footplate.


Silver solder to Jet holder. Check shape and length from job. Connect to control valve with standard 3/32" nipple silver soldered to pipe and 3/16" x 40 union nut.



Gas jet holder

Drill 1.4, tap 10BA

Jet holder 8mm dia. brass. Silver solder to 3/32" pipe from gas control valve union, Drill and tap to suit gas jet (typically 1BA, drill 4.5mm or 3/16" x 40, drill 4.1mm)

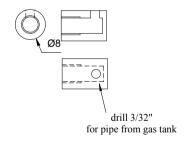

Wild Rose III sheet 21 Gas burner

Copyright Dave Watkins 3/6/2012